









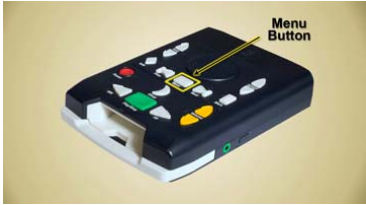
Button Reference Sheet for the Standard and Advanced Digital Talking Book Player




Button	Visual Description	Braille Description	Primary Function(s)	Important Info/Other Functions
Key Describer Mode - All buttons	N/A	N/A	When any button is pressed, player states the button's name and describes what the button does.	Works for all buttons but only when no cartridge is in player.
Power (On/Off) button 	Red, round, located near the front of the player on the left side.	Letter P in braille is located to the right of button.	<p>Turns player on/off when on battery power.</p> <p>When no cartridge is loaded and Power button is pressed, player reports remaining battery capacity and describes Power button function.</p> <p>When cartridge is loaded and button is pressed, player reports name of book and current reading position</p>	When button is held down for seven seconds player is reset – a beep is heard.

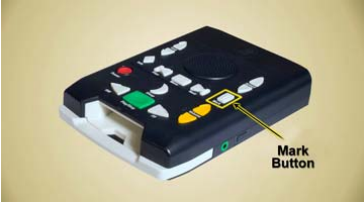
Button	Visual Description	Braille Description	Primary Function(s)	Important Info/Other Functions
Play/Stop button 	Green, square, located near front of the player in the middle.	Letter P in braille is located above the top-right corner of button.	Starts and stops book; book resumes where it left off.	(Standard player only) Pressing and holding will enter and exit the built-in User Guide which can be accessed any time the player is on.
Sleep button 	Gray, crescent shaped, located directly above Play/Stop button.	Letter S in braille is located to left of button.	Serves as a timer to turn the player off. Press button once to play cartridge for 15 minutes, press twice to play for 30 minutes, and so forth in 15 minute increments. Press Stop button to cancel the Sleep timer.	N/A

Button	Visual Description	Braille Description	Primary Function(s)	Important Info/Other Functions
FF button 	Light gray, triangular-shaped with raised pointer edges, pointing right, located near front of player to right of the Play/Stop button .	Letter F in Braille located just below pointed edge.	Moves reading position forward. Tap once to move forward 5 seconds in the cartridge; press and hold to move more quickly. Player will report new reading position. Beeps heard at the start of each chapter.	Beeps heard at the start of each chapter.
RW button 	Light gray, triangular-shaped with raised pointer edges, pointing left, located near front of player to left of the Play/Stop button .	Letter F in braille located just below pointed edge.	Moves reading position backward. Tap once to move backward 5 seconds in the text; press and hold to move more quickly. Player will report new reading position.	Beeps heard when chapter boundaries are crossed.

Button	Visual Description	Braille Description	Primary Function(s)	Important Info/Other Functions
Volume Up/Volume Down buttons 	Yellow, triangular-shaped with rounded edges and raised pointer edges, pointing up and down, located to the right of the Fast Forward button	Letter V in braille located to left of buttons.	Lowers or raises volume in 15 increments. Press once to raise or lower one increment. Double beep heard when minimum or maximum volume reached.	N/A
Buttons Above Raised Line				
Tone Up/Tone Down buttons 	Light gray with triangular-shaped arrows, rounded, raised edges at the points which point up and down	Letter T in braille located to the right of buttons.	Adjusts tone of the reading voice up or down in 11 increments when cartridge is loaded.	Single beep heard when tone is at normal level. Double beep heard when minimum or maximum level reached.

Button	Visual Description	Braille Description	Primary Function(s)	Important Info/Other Functions
Speed Up/Speed Down buttons 	Light gray, triangular-shaped, rounded edges, pointing up and down.	Letter S in Braille located to left of buttons.	Adjusts speed of reading voice up or down in 16 increments when cartridge is loaded	Single beep heard when speed is at normal level. Double beep heard when minimum or maximum speed is reached
Advanced Player Buttons (Above Raised Line)				
Menu button 	Light gray, rectangular-shaped with horizontal ridge across, just above raised line on Advanced player	Letter M in braille located to top right of button.	Sets navigation level of the cartridge. First press: announces navigation level of cartridge. Each subsequent press: advances to next navigation level of cartridge (varies per book type).	Menu button works with Previous Item and Next Item buttons (see below).

Button	Visual Description	Braille Description	Primary Function(s)	Important Info/Other Functions
Prev button 	Light gray, arrow-shaped with vertical bar at point, located to left of Menu button.	Letter P in braille located above the button.	Works with navigation levels (see Menu button). Moves backward from one item (i.e. chapters, bookmarks) to the next.	Press and hold to move by five items at a time.
Next button 	Light gray, arrow-shaped with vertical bar at point, located to right of Menu button.	Letter N in braille located above the button.	Works with navigation levels (see Menu button). Moves forward from one item (i.e. chapters, bookmarks) to the next.	Press and hold to move by five items at a time.
Info button 	Light gray, diamond-shaped button with raised dot in middle, located at left just above raised line.	Letter I in Braille located to right of button.	Reports current reading position, book information, battery status, power-plug status. Press button repeatedly to step through these items	Press and hold for 1.5 seconds to access built-in User Guide for Advanced player. Press and hold again to return to the book.

Button	Visual Description	Braille Description	Primary Function(s)	Important Info/Other Functions
Mark button 	Light gray, vertical rectangle with raised line in middle. Labeled "Mark" on player.	Letter B in Braille located to left of button	<p>Sets and removes bookmarks when button is pressed.</p> <p>Press button to set a bookmark or to remove one. Bookmarks can be removed by pressing the button when reading position is within 5 seconds of the bookmark.</p>	To remove bookmarks when book is not playing: press Mark button when reading position is at exact place of existing bookmark. Use Previous and Next buttons to find exact locations.